

VideoXpert OpsCenter v 2.5 Keyboard Shortcuts

G910 KEYBOARD CONTROLS¹



¹Enhanced Keyboard part number is Y-U0023-G910KBD; Enhanced Keyboard and 3D Mouse Combination Kit part number is A1-KBD-3D-KIT2.

Camera Controls (PTZ)

Shortcut	Action
Enter	Enter/exit PTZ Mode
Alt + Enter	Enter/exit Digital PTZ Mode
Home	Send the camera to its home position (Preset 1)
Ctrl + L	Lock/unlock PTZ camera
Left Arrow	Pan/nudge video when PTZ is enabled
Right Arrow	Pan/nudge video when PTZ is enabled
Up Arrow	Tilt/nudge video when PTZ is enabled
Down Arrow	Tilt/nudge video when PTZ is enabled
Page Up	Zoom in
Page Down	Zoom out
Ctrl + I	Open iris
Ctrl + Shift + I	Close iris
Ctrl + F	Focus in
Ctrl + Shift + F	Focus out
Ctrl + Shift + M	Center the selected camera on a map
N	Take a snapshot

Tab Navigation

Shortcut	Action
Ctrl + Tab	Go to the next tab
Ctrl + Shift + Tab	Go to the previous tab

Cell Contents and Layout

Shortcut	Action
Insert	Add a source to a cell by ID
Enter	Add a source to a cell by ID from the Call Up Camera/Time dialog
Delete	Close a video stream
Ctrl + E	Enter/Exit fullscreen mode
Esc	Exit fullscreen mode
Alt + A	Toggles the Show Analytics Drawing Data Analytics Overlay
Alt + M	Toggles the Simple-Motion Data Analytics Overlay
Ctrl + Del	Close all video streams in the selected window
Ctrl + O	Open the tooltip for the selected cell
Ctrl + "+"	Cycle layout; 1 up becomes 2 x 2, and so on
Ctrl + "-"	Cycle layout in reverse order; 2 x 2 becomes 1 up, and so on
Ctrl + J	Toggles stream statistics within a cell
Ctrl + Shift + J	Toggles stream statistics in all cells
Ctrl + Shift + S	Save the current window or workspace; if the current workspace does not yet exist, opens the Save As dialog
Ctrl + 1	1 x 1 layout
Ctrl + 2	2 x 2 layout
Ctrl + 3	3 x 3 layout
Ctrl + 4	4 x 4 layout
Ctrl + 5	1 x 2 layout
Ctrl + 6	3 x 2 layout
Ctrl + 7	2 x 3 layout
Ctrl + 8	4 x 3 layout
Ctrl + 9	2 x 1 layout
Ctrl + 0	1 + 5 layout
# + M	Select a monitor to receive a camera that you will send
# + C	Select a cell in a the monitor to receive a camera that you will send (use with # + M)
# + Enter	Open a camera in a cell.

Playback Controls

Shortcut	Action
Spacebar or P	Enter playback mode; when in playback mode, play/pause video
Alt + Enter	Engage playback at the specified 24-hour time
Alt	Hold and click fast forward or fast reverse icons to jump to the next or previous recording; Alt only works this way for on-screen controls, not for the fast forward or reverse keys or 3D mouse operations
Up Arrow	Play
Down Arrow	Pause
Alt + Spacebar or Alt + P	Reverse video at normal speed
L	Jump to live video
Left Arrow or Y	Fast reverse; press multiple times to increase playback speed
U	Reverse video 1 frame
I	Advance video 1 frame
Shift + Right Arrow	Play video at fractional speeds
Right Arrow or O	Fast forward; press multiple times to increase playback speed
A	Jump back 1 hour
S	Jump back 30 minutes
D	Jump back 1 minute
F	Jump back 30 seconds
G	Jump forward 30 seconds
H	Jump forward 1 minute
J	Jump forward 30 minutes
K	Jump forward 1 hour
B	Add bookmark
Shift + B + Right Arrow	Go to next bookmark
Shift + B + Left Arrow	Go to previous bookmark

SPACEMOUSE PRO CONTROLS²



²Enhanced 3D Mouse and Joystick part number is 3DX-600-3DMOUSE; Enhanced Keyboard and 3D Mouse Combination Kit part number is A1-KBD-3D-KIT2.

The joystick on the SpaceMouse Pro moves directionally and twists; each action performs a different function depending on your viewing mode. Press down on the joystick when in PTZ or Playback modes to escape the current cell and navigate the workspace without exiting PTZ or Playback in the current cell.

Directional controls:

- Navigation Mode—move between cells
- PTZ—pan and tilt the selected camera
- Mapping—move around the map
- Playback—move the joystick left or right to pause video and rewind or advance video frame-by-frame; move the joystick up to play back video at normal speed; move the joystick down to pause the video
- Date/time selector—move the joystick up or down to change the values of the date or time in the date/time selector; move the joystick side to side to move between fields within the date or time selection


Twist controls:

- Mapping—zoom the map in our out
- Playback—engage fast-forward or fast-reverse playback; twist again or twist and hold to increase playback speed
- Date/time selector—twist the joystick left or right to move between the date and time fields

SpaceMouse Pro Button Controls

Shortcut	Action
1	N/A
2	Last camera used
3	Previous camera (by ID)
4	Next camera (by ID)
Ctrl	Open iris
Esc	Close iris
Shift	Focus in
Alt	Focus out
Menu	Toggle playback mode
	Add a bookmark
	Take a snapshot
	Toggle PTZ Mode; “Go” when using the date/time selector
	Open the date/time selector
	Send a camera to its “Home” position (Preset 1)
Fit	Open the selected cell in full screen view

KBD5000 CONTROLS³

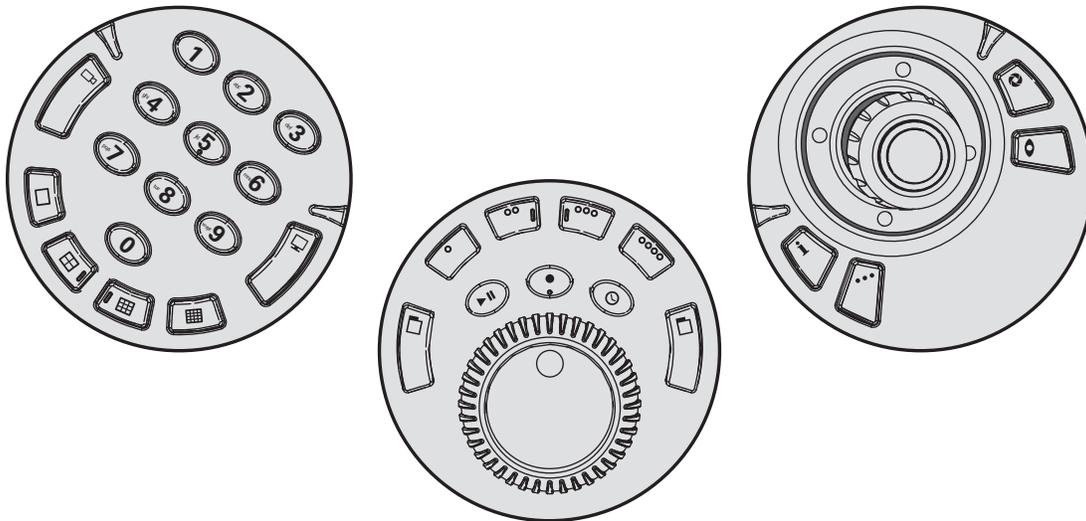

³KBD5000 part number is KBD5000.

General use of the controls is as follows:

- Button Colors--When selecting preferences or options, a green button confirms your choice and a red button cancels it.

- Jog--Turn clockwise to advance frames and counterclockwise to backspace.
- Joystick Button--Enter PTZ mode; submit date/time selection; when in playback mode, press to lock the playback speed. Cancels the camera-call-up dialog, if open.
- Joystick Directional Controls--Navigate in the interface; when in PTZ mode, use the joystick to pan and tilt cameras; when in date/time selector, move the joystick up or down to change the date or time values, and move the joystick side to side to move between fields within the date or time selection.
- Joystick Twist--Zoom while in PTZ mode; when in Iris or Focus modes, twist to adjust the iris or focus; when in date/time selector, twist the joystick left or right to move between the date or time fields.
- Shuttle--Turn clockwise to engage fast forward and counterclockwise to engage fast reverse; the rotation angle increases or decreases the playback speed.

KBD5000 Button Controls

Shortcut	Action
0-9	Enter camera number, monitor number, or playback time. If there is no camera 0, you can enter 0 to disconnect a stream in the Call-up Camera/Time dialog.
	Select camera (indicated by number). When using the Call-up Camera/Time dialog, press to select camera by ID.
	Select monitor by number.
	Toggle 1 x 1 layout.
	Toggle 2 x 2 layout; use with number input to select a cell by number.
	Toggle 3 x 3 layout.
	Toggle 4 x 4 layout.
	Create a bookmark.
	Take a snapshot.
	Play/Pause.
	Inactive.
	Toggles the Time/Day selector. Input a time and then press to engage playback at the specified 24-hour time.
	In PTZ Mode--Toggles iris on/off; twist the joystick to adjust the iris. Not in PTZ Mode--Toggles synchronous playback for the active tab.
	When in PTZ Mode, toggles focus on/off; twist the joystick to adjust focus.
	Press when in PTZ or Playback Modes to escape the current cell and navigate to the workspace. Hold to access keyboard shortcut information.

KBD5000 Button Controls

Shortcut	Action
● ● ●	Engage home preset. Input a preset number, press to engage a preset for the selected camera.
○	Go to the previous camera (by ID).
○ ○	Go to the next camera (by ID).
○ ○ ○	Go to the last viewed camera.
○ ○ ○ ○	Engage full-screen mode.

Pelco, Inc.

625 W. Alluvial, Fresno, California 93711 USA

(800) 289-9100 Tel

+1 (559) 292-1981 International Tel

www.pelco.com